

## BEARING INTERCHANGE LIST

RADIAL	AURORA	NHBB	NATIONAL	FK	HEIM	MORSE
RM	MM, KM	HAMR	MTSM	JM	HM	TRE
RF	MW, KW	HAFR	MTSF	JF	HF	TR
RM-H	AM	HAMRX	TSMX	JMX	BHM	ARE
RF-H	AW	HAFRX	TSFX	JFX	BHF	AR
XRM	XM	AXM	RM	RSM		
XRM-H	XAM	XAMX	RMX	RSMX	HMX	
RM-T	MM-T	AMRT	MTSM-T	JM-T	HME	TRE-T
RF-T	MW-T	AFRT	MTSF-T	JF-T	HFE	TR-T
RM-TH	AM-T		TSMX-T	JMX-T		
RF-TH	AW-T		TSFX-T	JFX-T		
XRM-T	XM-T		RM-T	RSMX-T		
XRM-TH	XAM-T		RXM-T	RSMX-T		
REMX		AMRX-F	BMX-Z		HMX	ARE-20N
REM-TH-5/6	ASM-T	ANM/ARTE	SSAM-T		ME	
REF-TH-5/6	ASW-T	ANF/ART	SSAF-T		FE	
XRM-TH-6		ARHT-ECR	SSHM-T			
XRF-TH-6		ARHT-CR	SSHF-T			
RMYT-H	HXAM-T	ARYT-E				
RMYT-HSS	HXAM-T	ARYT-ECR				
CRS	COM		COM			COM
R					LHB	SBG
RB						
RS					LHA	SBG-S
R-SS					LHSS	SBG-SS
RCR					COS	COR
RSH	HCOM					BH-LS
RW/RW-V		ABW/ABW-V				
RPHT/RPHT-V	ANC-T/ANC-TG	ABT-ABT-V	NSSB/NSSB-V		NE/NEG	NE/NEG
RWT/RWT-V	AWC-T/AWC-TG	ADW/ADW-V	WSSB/WSSB	FKSST-1	WE/WEG	WE/WEG
RYT/RYT-V	HAB-T	ABYT/ABYT-V				

Note: The above interchanges are approximate and not intended to indicate that all manufacturers are functionally interchangeable in all applications.



203-744-0323 800-377-1937 Fax: 203-744-1691