

Bearing Interchange List

RADIAL	AURORA	NHBB	FK	HEIM	MORSE
RM	MM, KM	HAMR	JM	HM	TRE
RF	MW, KW	HAFR	JF	HF	TR
RM-H	AM	HAMRX	JMX	BHM	ARE
RF-H	AW	HAFRX	JFX	BHF	AR
XRM	XM	AXM	RSM		
XRM-H	XAM	XAMX	RSMX	HMX	
RM-T	MM-T	AMRT	JM-T	HME	TRE-T
RF-T	MW-T	AFRT	JF-T	HFE	TR-T
RM-TH	AM-T		JMX-T		
RF-TH	AW-T		JFX-T		
XRM-T	XM-T		RSMX-T		
XRM-TH	XAM-T		RSMX-T		
REMX		AMRX-F		HMX	ARE-20N
REM-TH-5/6	ASM-T	ANM/ARTE		ME	
REF-TH-5/6	ASW-T	ANF/ART		FE	
XRM-TH-6		ARHT-ECR			
XRF-TH-6		ARHT-CR			
RMYT-H	HXAM-T	ARYT-E			
RMYT-HSS	HSAM-T	ARYT-ECR			
CRS	COM				COM
R				LHB	SBG
RB					
RS				LHA	SBG-S
R-SS				LHSS	SBG-SS
RCR				COS	COR
RSH	HCOM				BH-LS
RW/RW-V		ABW/ABW-V			
RPHT/RPHT-V	ANC-T/ANC-TG	ABT-ABT-V		NE/NEG	NE/NEG
RWT/RWT-V	AWC-T/AWC-TG	ADW/ADW-V	FKSST-1	WE/WEG	WE/WEG
RYT/RYT-V	HAB-T	ABYT/ABYT-V			

Note: The above interchanges are approximate and not intended to indicate that all manufacturers are functionally interchangeable in all applications.



POWERED BY **CABLECRAFT**

203-744-0323
800-377-1937
FAX: 203-744-1691

